


Find a sunny location to install the floodlight.


3 Different installation methods:

A. Wall Mounted:

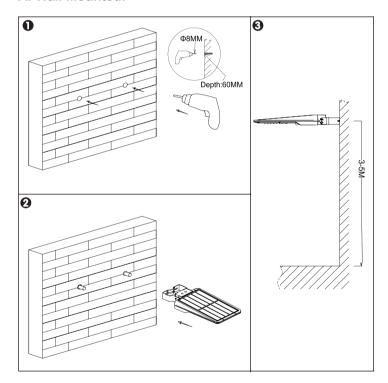


- ①. Drill two holes of Φ8mm with a depth of 60mm on the wall.
- **②**. Fix the expansion screws into the holes.
- **3**. Then use a hex key to fix the lamp on the wall with expansion screws.

B. Straight pole:

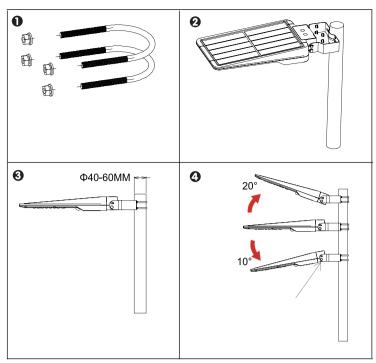


- **1**. Remove the nut spacer of U-shaped brackets.
- **②**. Use the U-shaped brackets to fix the lamp on the pole.
- **3**. The poles diameter should be Φ40-60MM.
- Q. Loosen the screws at both ends of the bracket and adjust the angle of the lamp as needed, which is 20° adjustable in clockwise direction and 10° adjustable in counter clockwise direction, then tighten the screws.

C. Curved pole:

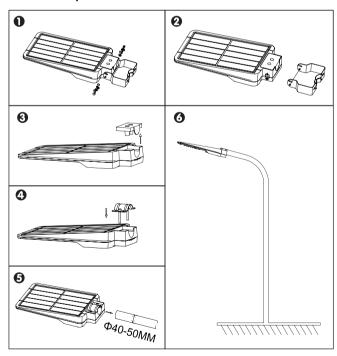


- **0+2**. Loosen the screws and take off the bracket.
- 3. Move the cover of lamp socket
- Fix the arch-shaped bracket onto the lamp socket. (Do not lock first).
- **Θ**. Set up the lamp onto the lamp pole The poles diameter should be Φ40-60MM.
- **6**. Adjust the lamp and balance it, then lock the arch-shaped bracket.

Operating the floodlight:

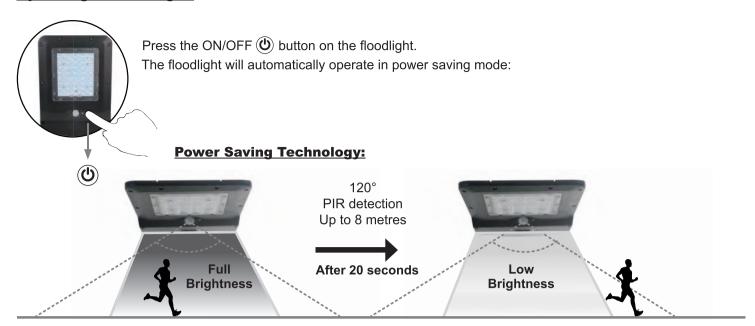

Automatically turns on full brightness when motion is detected up to 8 metres, the light will then turn to low brightness after 20 seconds.

After 5 hours or 30% battery capacity:

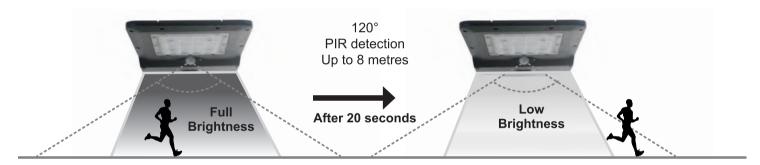

Automatically turns on full beam when motion is detected up to 8 metres, then light turns to low beam after 20 seconds and turns off after 5 minutes.





NexSun is a brand of NightSearcher Ltd.

NightSearcher Limited, Unit 4 Applied House, Fitzherbert Spur, Farlington, Portsmouth, Hampshire, PO6 1TT, UK

T: +44 (0)23 9238 9774 E: sales@nightsearcher.co.uk

All NexSun products have a 3 year standard warranty on all manufacturing defects and 2 years on rechargeable batteries from the date of purchase.

Please visit www.nexsun.co.uk for warranty information, proof of purchase is required.



Product weight	1.95kg
Product size	495x232x58mm
NS Part No.	NEXSUN-1800